


New, Dry Oven.
Received in the year
of 2023.
P.P

Thermal processing equipment for laboratories

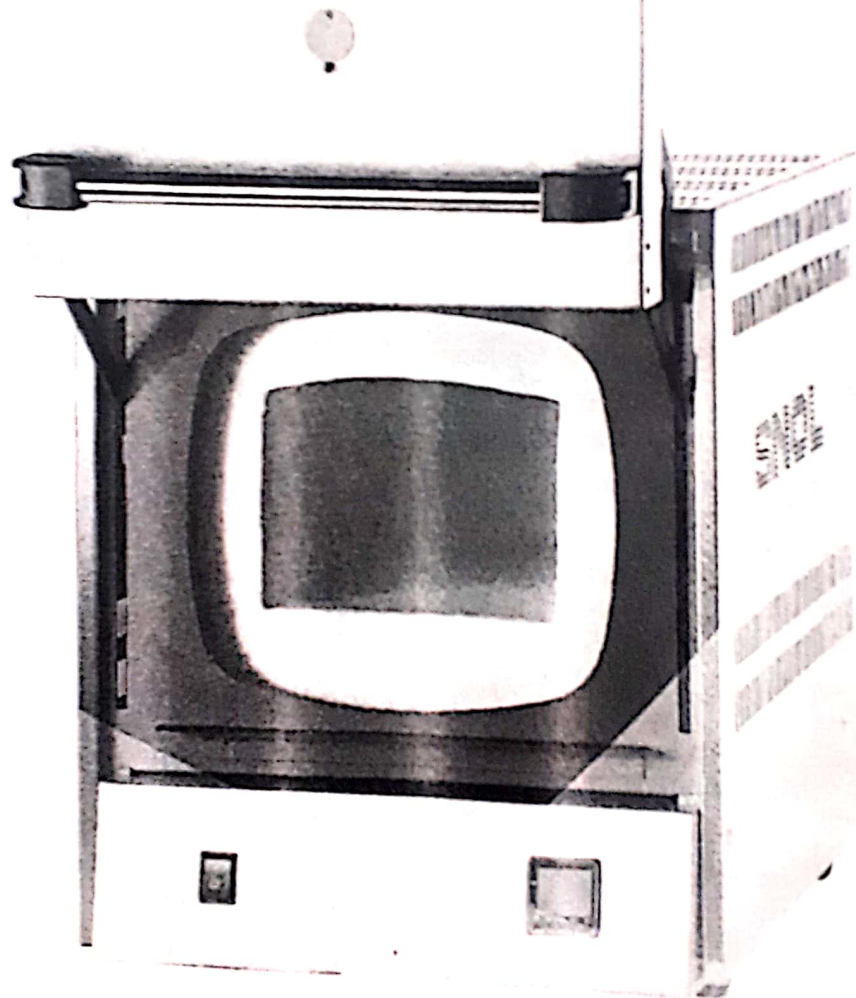


SNOL

Customized for your hot innovations

i. Main Technical Parameters

Model		60/300NL
Cycle Mode		Natural Convection
Function	Temp. Range	RT+10-300°C
	Temp. Resolution	0.1°C
	Ratio	
	Temp. Motion	±1°C
	Temp. Uniformity	±3.5%
Structure	Inner chamber	Mirror Stainless Steel
	Outer shell	Cold rolling steel electrostatic spraying exterior
	Insulation layer	Compound silicate heat preservation board
	Heater	Stainless steel heater
	Power rating	1.6KW
	Exhaust hole	∅28mmtop(with function of test hole)
Controller	Temp. control mode	Two temperature section PID intelligent
	Temp. setting mode	Touch button setting
	Temp. display mode	Display on LED
	Timer	0-9999min(with timing function)
	Operation function	fixed temperature operation, timing function, auto stop
	Additional function	Mechanical independent temperature limiter, sensor deviation correction, temperature overshoot self-tuning, internal parameter locking, power-off parameter memory
	Sensor	pt100
Specification	Inner chamber size (W*L*H)(mm)	400*360*450
	Exterior size (W*L*H)(mm)	550*550*840
	Packing size (W*L*H)(mm)	640*635*985
	Volume	65L
	Shelf number	9
	Load per rack	15KG
	Shelf space	35mm
	(50/60HZ) Current rating	AC220V/7.2A
	NW/GW (kg)	44/49
Accessory	Shelf	2
	Shelf frame	4

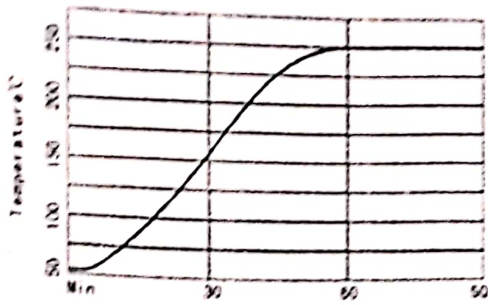

NOTE: The heating time is different between each model.

IV. Working conditions

The drying oven work under the following conditions:

1. Temperature ranges between 5~40°C;
2. Relative humidity less than 85% RH;
3. Power: voltage 220-240v, frequency 50-60Hz;
4. No succession and corrosive gas surround the oven.

V. Attentions

1. Install the outer ground protection to ensure safety of machine and experiment; supply power as the machine nameplate required.
2. This equipment is forbid to use in inflammable and explosive, poisonous and strong corrosive experiments.
3. Make sure horizontal installation.
4. Non-professionals are not allowed to disassemble and repair this machine.
5. Pay attention to the setting temperature when dealing with inflammable matters.
6. Make sure dry the resin container, if the temperature is setting too high by accident, the container would be dissolved and then fall on the heater, which will cause fire.
7. Overfilled of sample will lead to overheat of working room under part, which will dissolve the inflammable material and cause fire.
8. While the machine is working, don't touch the device top, as well as observation window and exhaust port to keep away from high-temperature burns.
9. Read the instruction book before operation.

VI. Operation instruction

1. Put the material needs drying into container (advice: size of drying material should not over 2/3 of the shelf); then close the container door and switch power, and next switch on the blower.

2. Heating

Set the temperature as needs (find details in meter instruction), then the temperature starts to rise; when temperature inside working room reaches the set point, the indication light will go out, after constant temperature for 30min, the working room goes into constant temperature state.

3. Working time:

Decide the drying time according to humidity of sample.

Note: for example, if the sample humidity is big, the sample on each layer should not be too thick to ensure intensive drying of sample.


4. After finishing drying, turn off power, and then bring the sample out.

5. Keep the drying oven clean, wipe the container sealing rubber strip by soft cloth and clear the dirt out; avoid cleaning it by chemical solution to prevent chemical reaction damage on sealing rubber strip.

6. If the oven is unused for a long time, daub neutral grease or Vaseline on galvanized parts to prevent corrosion; cover the oven with plastic dust cap, and store it in the dry room to keep the electric device against wet.

VII. Meter operation instruction

Panel Instructions

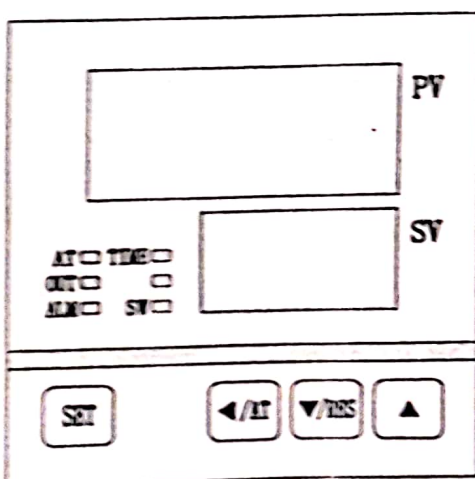

Indicator light function

- 1) AT: It flickers during self-tuning, it is not bright in any other state.
- 2) OUT: It is lit when heating output.

- 3) TIME: It is lit when time is set, it flickers in the process of timing.
- 4) ALM: It is lit when there is a temperature alarm.
- 5) SW: It is invalid.

Button function

- 1) **[SET]**: In normal state, press this button to enter the setting state.
- 2) **[◀/AT]**: "SHIFT" button. In the setting state, click this button to shift the set value.
In normal state, press this button for 6 seconds to enter the auto-tuning selection state.
- 3) **[▼/RES]**: "DEC" button. In the setting state, click this button to reduce the set value.
If you keep pressing this button, the value will reduce continuously. In the normal state, when the timer ends, press this button for 3 seconds, the controller will restart to work.
- 4) **[▲]**: "INC" button. In the setting state, click this button to increase the set value. If you keep pressing this button, the value will increase continuously.

1. Operation and using

1-1. When the controller is switched on, All displays light up for 2 seconds, display windows show the version number and controller model for 2 seconds, then it starts running.

1-2. Temperature and Time Setting

1) Without Timing Function :

In the normal state , press the "SET" button to enter the temperature setting state, windows display the prompt "SP" and the temperature set point value. Using the "SHIFT", "DEC" and "INC" buttons, user can edit the temperature set value. Press the "SET" button again, the controller will return to its normal state, the setting value will be saved automatically.

2) With Timing Function :

In the normal state , press the "SET" button to enter the temperature setting state, windows display the prompt "SP" and the temperature set point value. Re-press the "SET" button to enter the time setting state, windows display the prompt "ST" and the time set point value. Press the "SET" button again, the controller will return to its normal state, the set values will be saved automatically.

When the time is set to "0", it indicates the timer is inoperative, the controller will run continuously, the under window will display the temperature set point value. If there is time set, the under window will display the running time, its decimal point and the "TIME" indicator are lit, when the timer starts, its decimal point and the "TIME" indicator flickers. When the timer ends, the under window will display the "End" prompt, the buzzer will sound for 5

minutes, it can be muted by pressing any button, press the "DEC" button for 3 seconds, the controller will restart to work .

- 1-3. If the upper window show the prompt "---", it indicates that the temperature sensor has faults or temperature exceeds the measuring range or the controller itself is faulty, the controller will cut off the heat output automatically, the buzzer will sounds continuously, "ALM" indicator is lit, Please check the temperature sensor and its wiring carefully.
- 1-4. When over temperature alarm, the buzzer beeps continuously, "ALM" indicator is lit, the heat output is cut off. If the over temperature alarm is caused by the change of the temperature setting value, "ALM" indicator is lit, but the buzzer does not beep.
- 1-5. When the buzzer sounds, press any key to mute.

2. Auto-tuning

In the normal state, press the "SHIFT" button for 6 seconds, the controller will enter the auto-tuning selection state, the upper window displays the prompt "AT", the under window displays "0", change "0" to "1" by pressing the "INC" button, then press the "SET" button, the controller will run the auto-tuning program, the "AT" indicator flickers. After auto-tuning end, the indicator stops flickering, PID parameter value is saved automatically. In the auto-tuning process, press the "SHIFT" button for another 6 seconds, the controller will stop the auto-tuning program.

During the Auto-tuning process, if over temperature alarm, the buzzer does not beep, "ALM" indicator is not lit, the heat output will be cut off, the "SET" button is invalid, the under window always displays temperature set point value.

3. Internal parameters settings

In the normal state, press the "SET" button for 3 seconds, windows will display the prompt "Lc" and the password value. Adjust the password to the required value, then press the "SET" button again, it will enter the internal parameters setting state. Press the "SET" button for another 3 seconds, it will return to the normal state, the set value will be saved automatically.

Parameter table 1

Prompt	Name	Function description	(Setting range) Factory value
Lc	Password key	When "Lc=3", enter the next parameters.	0
ALH	Over-temp alarm	If "PV>SV+ALH", the ALM indicator turns on. The buzzer sounds and the heat output turn off.	(0 ~ 100.0°C) 20.0
P	Proportional band	Adjustment of proportional function.	(0 ~ 300.0°C)
I	Integration time	Adjustment of integration function.	(1 ~ 2000S) 300
D	Differential	Adjustment of differential	(0 ~ 1000S) 200

	time	function.	
T	Control cycle	The temperature control cycle.	(1 ~ 60S)
Pb	Temperature deviation correction	It is usually used to correct errors in low temperature measurement.	(-50.0 ~ 50.0°C) 0
PL	Temperature slope correction	It is usually used to correct errors in high temperature measurement.	(-999 ~ 999) 0

Parameter table 2

Prom nt	Name	Function description	(Setting range) Factory value
Lc-	Password key	When "Lc=9", enter the next	0
doT	Temperature decimal point	0: No decimal point display 1: With decimal point display	(0 ~ 1)
ndT	Timer mode	0: No timer function. 1: Start timing when the temp reaches the set value. 2: Start timing as soon as the	(0 ~ 2) 1
Hn	Timer unit	0: Minute. 1: Hour.	(0 ~ 1)
SPd	Timer parameter	If "ndT=1", Start timing when "SV SPd DM SV"	(0.1 ~ 50.0°C)
EH	Timer end mode	0: Continue to control the temperature	(0 ~ 1)
oPn	Door parameter	Automatic judge door opening. 0: invalid; 0: valid	(0 ~ 1)
nP	Power	Percentage of max heating	(0 ~ 100%) 100
Co	Heating prohibited	When "PV ≥ SV + Co", heating output will be cut off	(0 ~ 50.0°C) 50.0
SPH	Max set value	The maximum temperature set point value.	(0 ~ 400°C) 300.0




Parameter table 3




Prom nt	Name	Function description	(Setting range) Factory value
Lc	Password key	When "Lc=567", enter the next	0
rST	Factory reset	0: cancel; 1: confirm	(0~1) 0

6. Wiring

■: Represents the charged output, should be directly connected to the load.

○: Represents the uncharged output without charge.

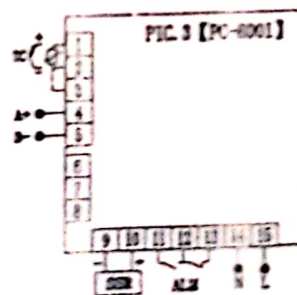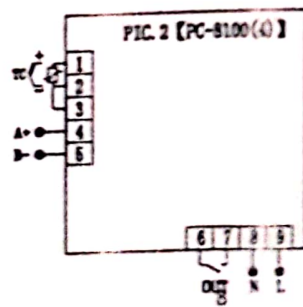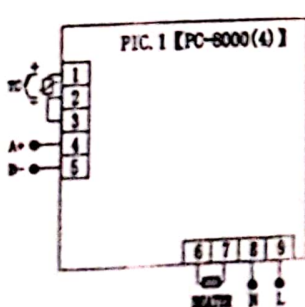

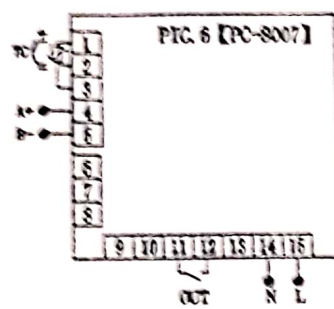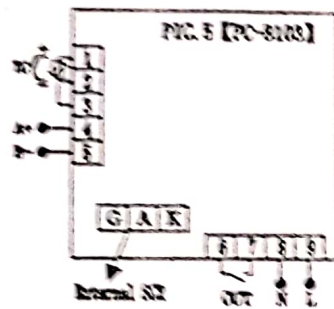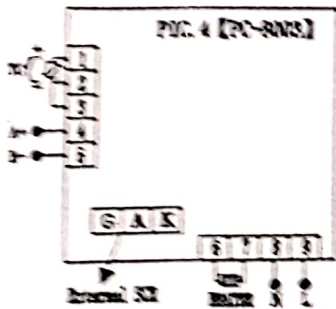

VIII. Fault analysis

Phenomena	Causation	Treatment Method
1.No power supply	1.Plug is poor contact or line broke	1. Connect the plug and line.
	2. Fuse protector is broke.	2. Change the fuse protector.
2. No temperature rising inside container	1. Low setting temperature	1. Readjust and set tempe.
	2. Heater is broke.	2. Change the heater
	3. Temperature controller is broke	3. Change the temperature controller
	4. Temperature sensor is loose.	4. Screw up the sensor nut.
	5. Temperature sensor is broke	5. Change the temperature sensor.
3. No temperature rising alarm	1. Setting temp. of Detached tem. limiter is low	1. Readjust the temp. 30°C above setting temp.
	2. Detached temperature limiter sensor is broke.	2. Change the detached temperature limiter sensor
4. Temperature cannot reach the setting point.	1. Exhaust port is fully opened	1. Shut off the exhaust port.
	2. The container is overfilled, hot air cannot convert.	2. Decrease amount of sample to improve convection condition.
5. The fan does not work.	The fan motor is broke	Stop work and check electric capacity and motor
6.Displaying-----	The sensor is broke	Change the sensor
7.Display STOP	Time-up	Press the program key for 3s to start

SnolTherm, part of Umega Group, AB
Plento st. 3, Narkunai, LT-28104 Utena, Lithuania
Tel.: +370 389 54586
Fax: +370 389 81223
E-mail: sales@snoltherm.com
www.snol.com

Offices

SnolTherm GmbH
Registered office: Asbacher Straße 27 a, 53577 Neustadt/Wied,
OT Etscheid, Germany
Permanent establishment: Winchesterstr. 2, D-35394 Gießen, Germany
Phone: +49 157 346 99 146
Email: rastislav.michalko@snoltherm.com
www.snol.com/de

SNOL Ukraina OOO
Mahnitohorska st. 1ch, office No 1, 02660 Kiev, Ukraine
Phone: +38 050 6988466
Email: snol@snol.ua
www.snol.ua

SNOLBel OOO
40 god Peramogi st. 27/1-8 223053 Borovlyanski s/s, Belarus
Phone: +375 29 6747576
Email: greig@mail.ru
www.snol.by

SNOL-TERM OOO
Nikolaya Korytkova av., 3B-408 170024 Tver, Russia
Phone: +7 4822 399579
Email: info@snol-term.ru
www.snol-term.ru

SNOL
1992 - 2019